


Assembly instructions ARED-108/810 Door Retainer


Components:

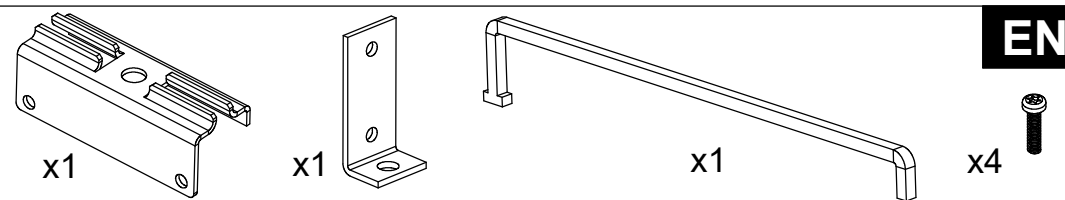


EN

Initial pre-assembly:


Pass the end without the stop of the rod through the hole in the base retainer plate

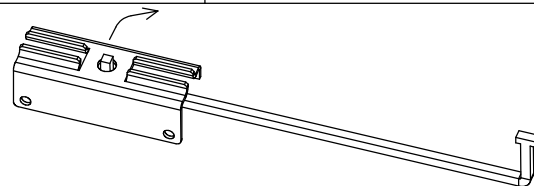


Move the rod by rotating it until the end of the stop reaches its final locking position

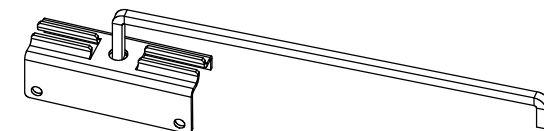



ARED-108

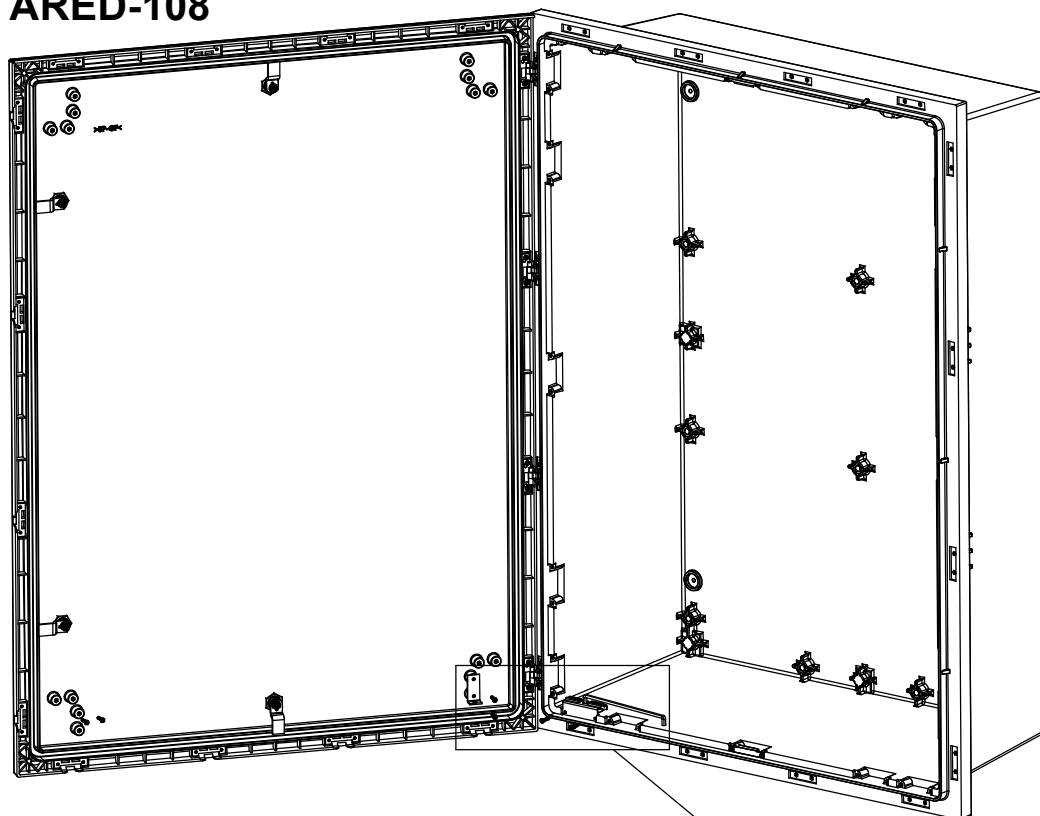

ARED-810

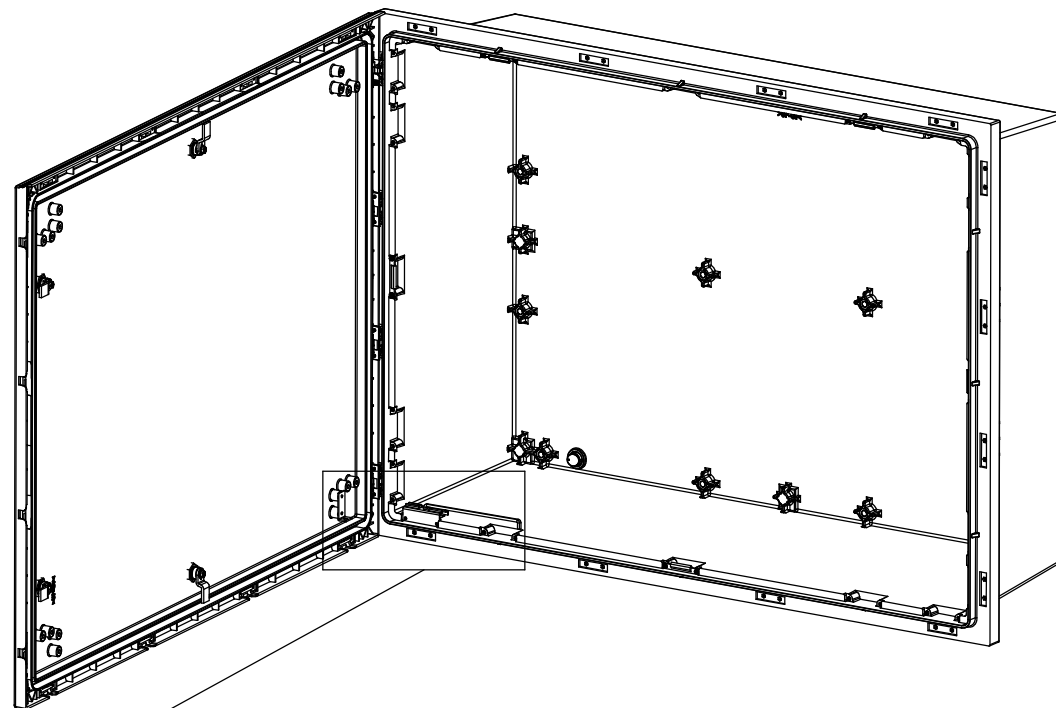

Attach the "L" bracket to the door and pre-assembly to the base (position shown in the image) using the 4 screws. Use a TORX TX15 bit

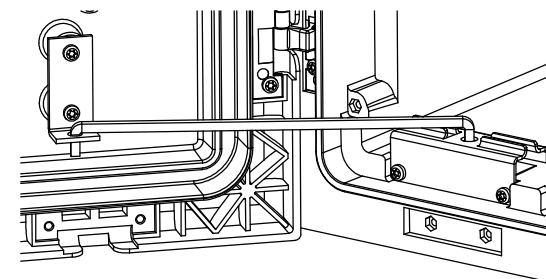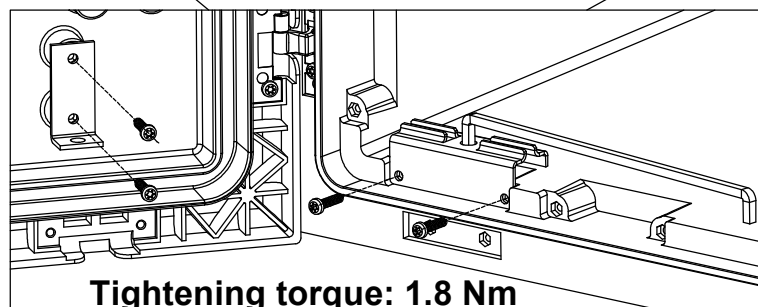

Turn the rod until it fits into the "L" plate to lock the door